




DOORBRIM Awnings™

Extended Width Door Canopy

Installation Instructions

Tools Required: Hammer drill 7/32 Concrete drill bit Ratchet with 5/16" socket Silicone caulking	Pencil Caulking gun 6' Step ladder 48" Level Paint (optional)	In the Box: 1 - Door Canopy (Left & right sections) 1 - Splice bracket 10 - 1 3/4" x #14 Stainless steel concrete screws and 1/4" x 1" bonded washers (purchased separately)
---	---	---

IMPORTANT: We recommend that a qualified licensed and insured contractor install your DOORBRIM Door Canopy.

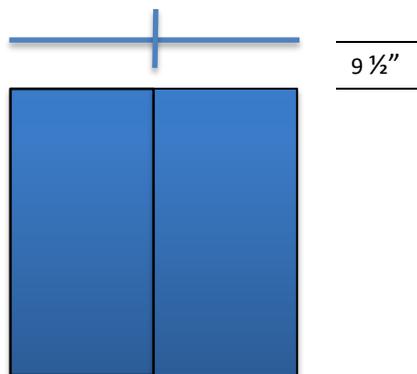

STEP 1. Mark a plumb line above the center of the two doors and a level line 9 1/2" above the top of the open doors.

STEP 2. Use the splice bracket as a template. Hold in place aligning the top of the splice bracket 1/8" above the level line marked 9 1/2" above the top of the open doors. Mark the upper portion of the key hole slots.

STEP 3. Remove the template, **wear proper eye protection** and drill the pilot holes.

We recommend the following fasteners for masonry, concrete and brick veneers. Elco Crete-Flex fasteners are easily installed with a commercial-grade hammer drill or rotary hammer using a 7/32" ANSI masonry drill bit (actual bit diameter of .229"-.237") and a traditional 1000 installation tool or Crete-Flex Pro installation tool. **As with all cutting tools and fasteners, normal safety precautions should be observed when drilling holes to avoid electrical installations, other utilities and reinforcement bars. The wearing of safety glasses by users and persons in the vicinity is required by Federal Law.**

STEP 4. Install 4-1/4"x 1 3/4" screws leaving them approximately 3/8" away from the wall.

STEP 5. Apply caulking to back of the splice bracket. Slip the splice bracket key hole slots over the screws and hand tighten the screws with a 5/16" box wrench or ratchet.

STEP 6. Apply caulking inside the splice bracket grooves in the female slot on both sides.

STEP 7. Apply caulking to the back of the LEFT Door Canopy mounting flange.

STEP 8. **Wearing proper eye protection**, slip the left Door Canopy into the splice bracket, level Door Canopy, drill and **fasten with the appropriate hex head screws and bonded washers** for the substrate that you are connecting to.

Attach your Door Canopy to the wall using a ratchet with a 1/4" socket or nut driver to install the concrete fasteners. Hand tighten the last 1/4" until the Door Canopy is seated firmly against the wall in a bed of caulk. **DO NOT OVER TIGHTEN FASTENERS** to avoid risk of damaging the mounting flange! **DO NOT USE UNDERSIZED SCREWS.**

STEP 9. Apply caulking and repeat STEP 8 for the RIGHT side of the Door Canopy.

\$\$\$ REBATE \$\$\$: Email several photos of your installation to admin@doorbrim.com for a \$10 mfg. rebate. You do not have to be the original purchaser to apply.